



TECHNICALLY BUILT

WALL MOUNTING & ASSEMBLY GUIDE

TABLE OF CONTENTS

ASSEMBLY + MOUNTING 3

LEGO® TECHNIC MOUNTING GUIDES 4-10

LEGO® ICONS MOUNTING GUIDES 11-13

LEGO® CREATOR MOUNTING GUIDES 14-15

LEGO® MARVEL MOUNTING GUIDES 16-17

LEGO® BATMAN MOUNTING GUIDES 18-19

LEGO® STAR WARS MOUNTING GUIDES 21-22

CADA MOUNTING GUIDES 23-24

ASSEMBLY GUIDE


TOOLS REQUIRED



PHILLIPS
SCREWDRIVER



LEVEL

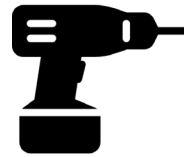

DRILL



DRILL BITS

TB WALL MOUNTS

- Start by measuring where you want the vehicle and or set to hang on the wall
- Use a 1/4" drill bit for large screws and 3/16" drill bit for small screws to create holes for inserting the anchors (*No anchors required if drilling straight into stud.*)
- Insert the anchors and use a rubber mallet if needed to make them flush with the wall.
- Start screwing in the wall mount with either a drill or screwdriver (***DO NOT USE DRILL TO DO FINAL TIGHTENING, DAMAGE TO THE MOUNT CAN RESULT.***)
- Tighten down the mount to a snug fit using a phillips screwdriver.

TB MINIFIG FLOATING WALL SHELVES

- Remove the small phillips screw from the underneath side of the shelf to separate the wall bracket.
- Drill a hole in the wall with a 3/16" drill bit then insert the included small wall anchor.
- Use a rubber mallet to hammer in the anchor if needed.
- Start screwing in the wall mount bracket with either a drill or screwdriver (***DO NOT USE DRILL TO DO FINAL TIGHTENING, DAMAGE TO THE MOUNT CAN RESULT.***)
- Tighten down mount to a snug fit using a phillips screwdriver.
- Place the shelf on top of the wall bracket in the slot and screw the small phillips screw back into the bottom of the shelf. The screw should be tight enough that the shelf does not have any play but not so tight that you damage the shelf



WARNING!
DO NOT USE DRILL TO DO FINAL TIGHTENING.
DAMAGE TO THE MOUNT CAN RESULT.







TECHNICALLY BUILT

**VEHICLE MOUNTING GUIDE FOR
LEGO® TECHNIC**


LEGO TECHNIC

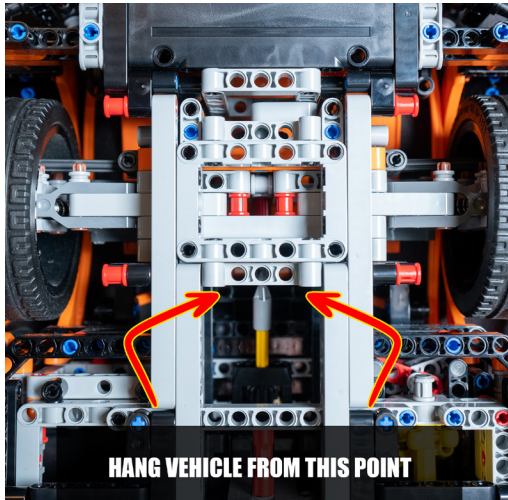


PORSCHE 911 GT3 RS - 42056

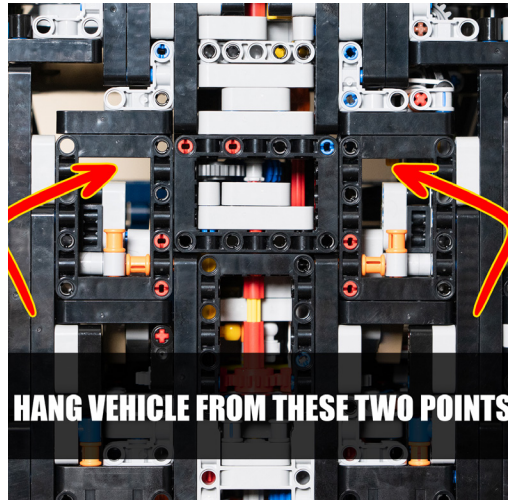


BUGATTI CHIRON - 42083

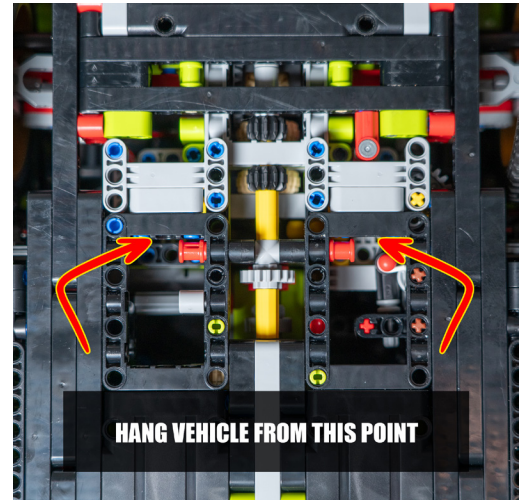


LAMBORGHINI SIAN - 42115

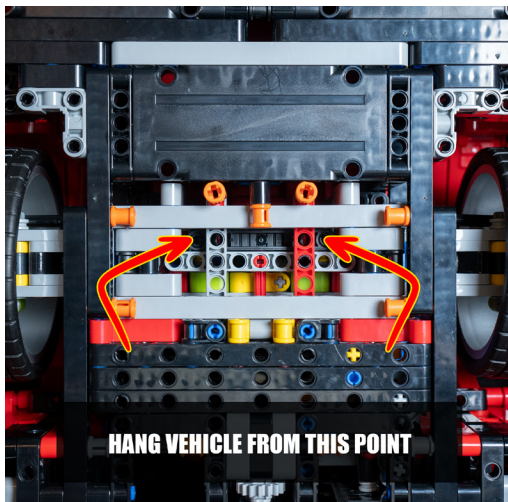

FERRARI DAYTONA SP3 - 42143

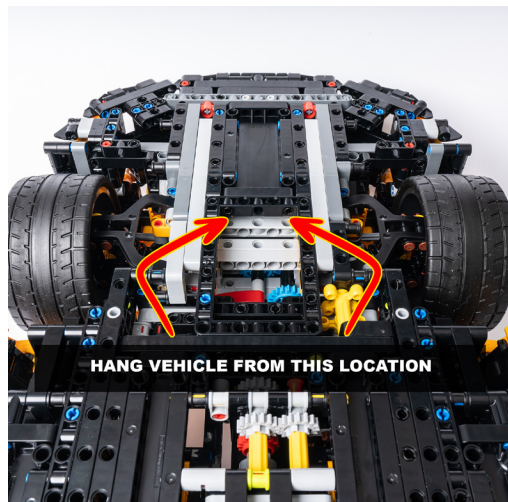


MCLAREN P1 - 42172

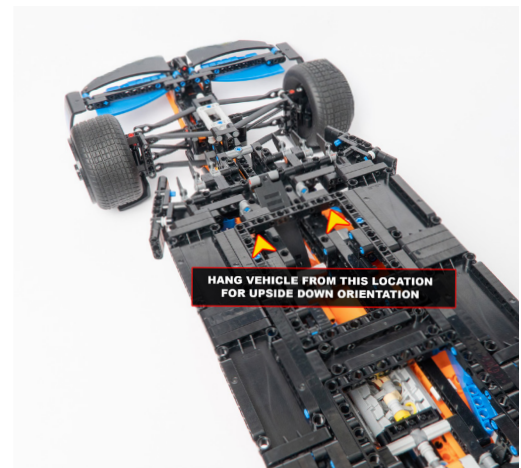

MCLAREN F1 (VERTICAL) - 42141

TB


MOUNTING DIAGRAM FOR 42141H

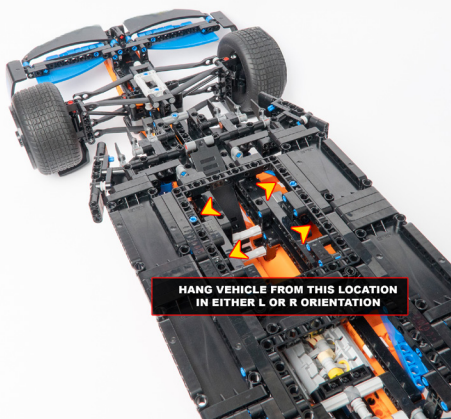

MCLAREN F1 (HORIZONTAL) - 42141

TB


MOUNTING DIAGRAM FOR 42171V

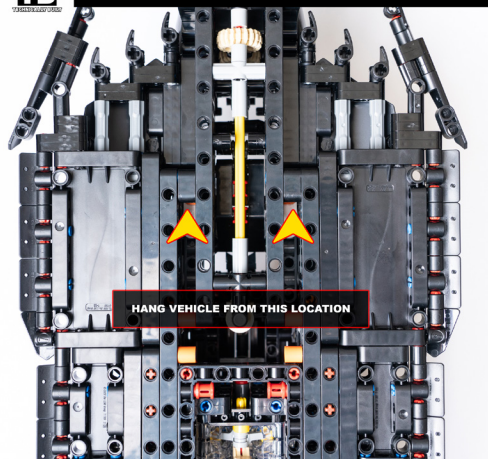

MERCEDES AMG F1 (VERTICAL) - 42171


TB

MOUNTING DIAGRAM FOR 42171H

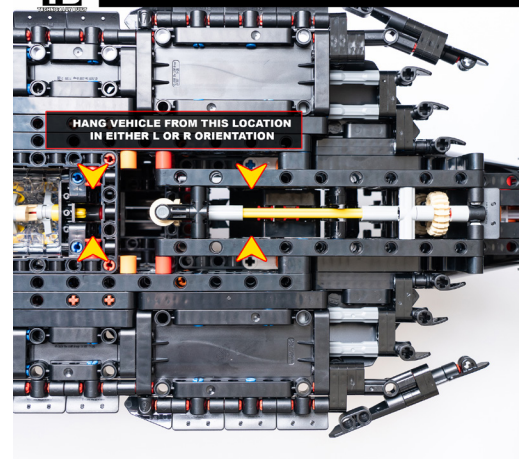


MERCEDES AMG F1 (HORIZONTAL) - 42171


LEGO TECHNIC

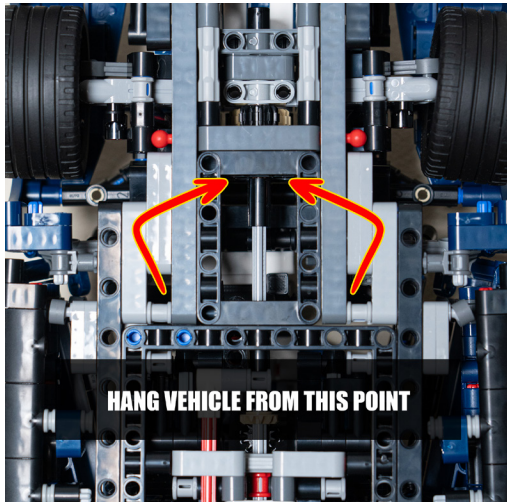


FORD GT - 42154

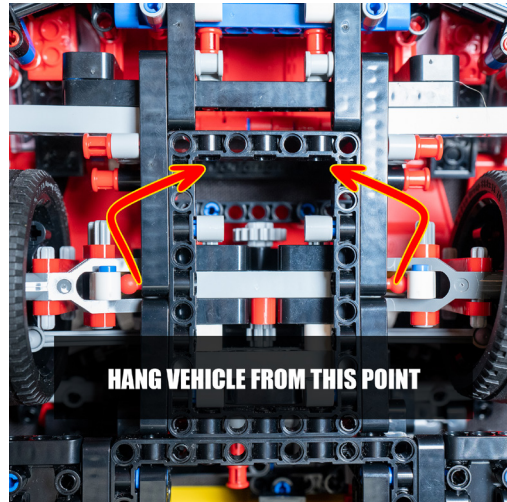


FERRARI 488 GTE - 42125

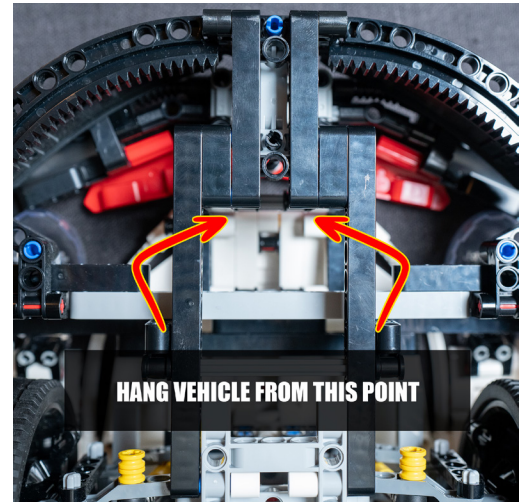


PORSCHE 911 RSR - 42096

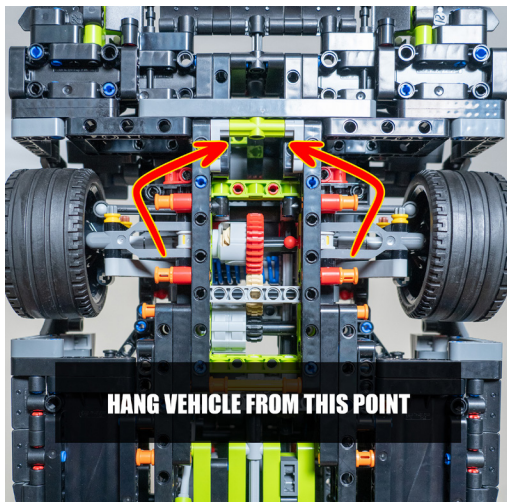


PEUGEOT 9X8 - 42156

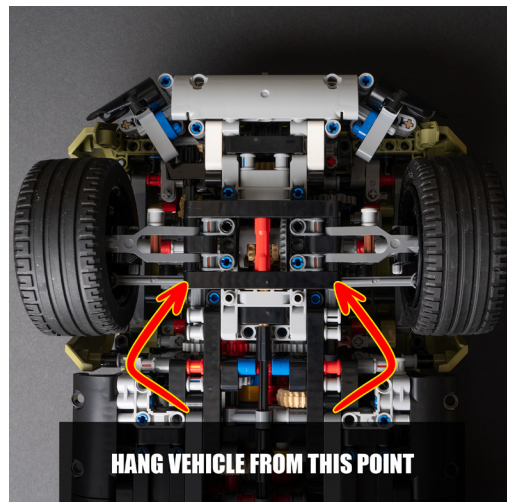


LAND ROVER DEFENDER - 42110

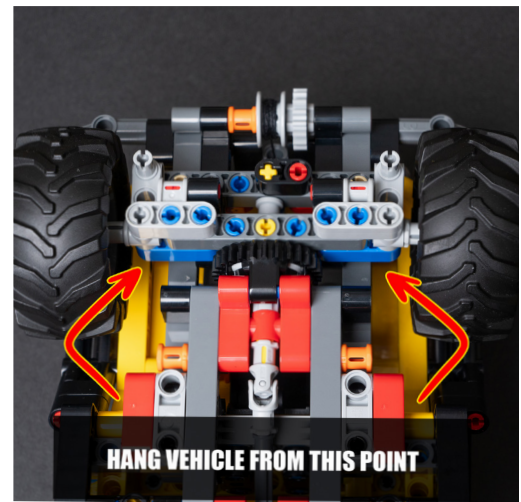

JEEP WRANGLER - 42122

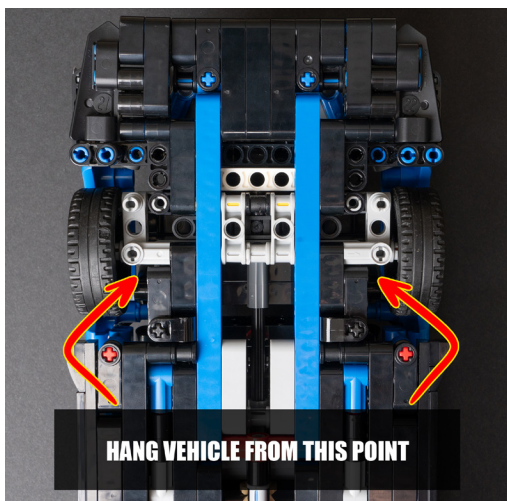

MCLAREN SENNA GTR - 42123

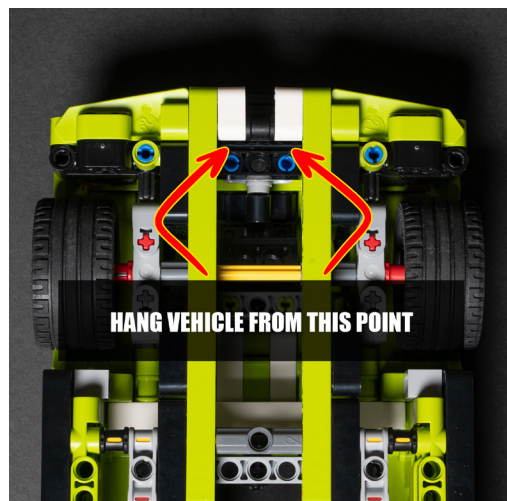


FORD MUSTANG SHELBY GT500 - 42138




CORVETTE ZR1 - 42093


LEGO TECHNIC

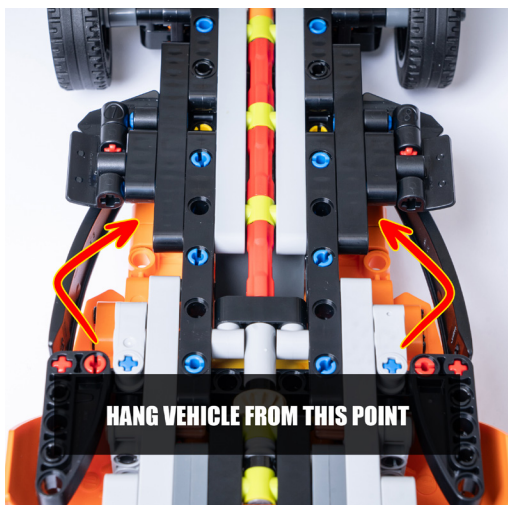


NEOM MCLAREN FORMULA E - 42169

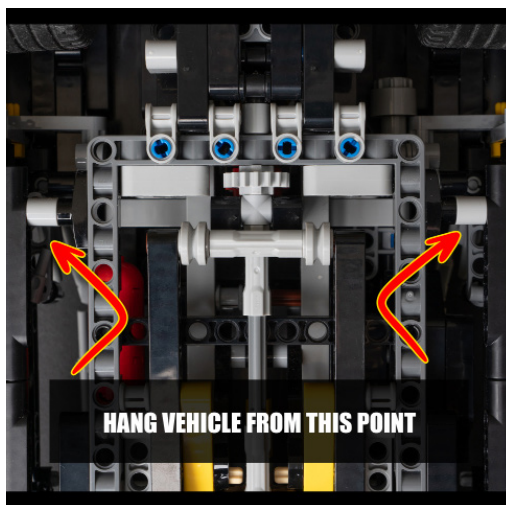

DOMS CHARGER - 42111

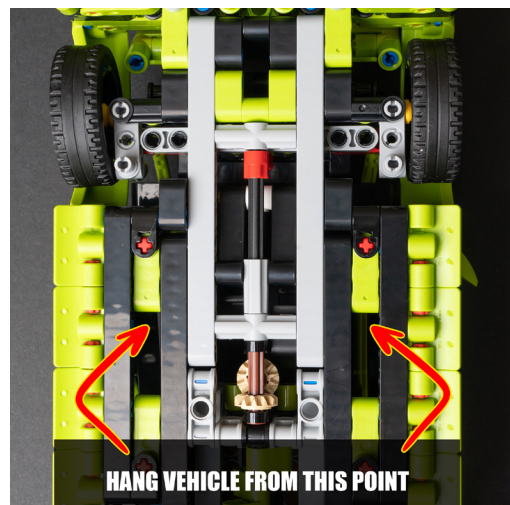

LAMBORGHINI HURACAN - 42161/42196

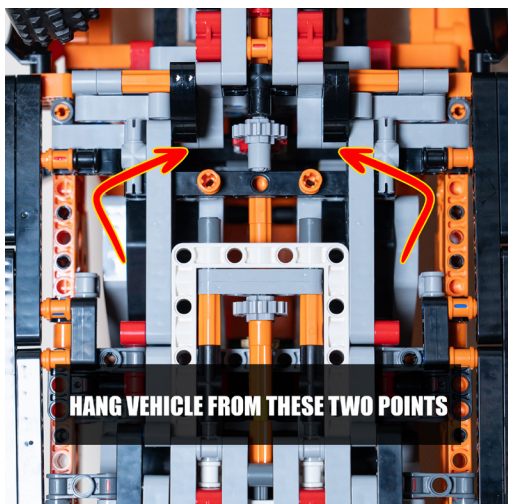


FORD RAPTOR- 42126


**COMING
SOON!**




MERCEDES-BENZ G 500 - 42177

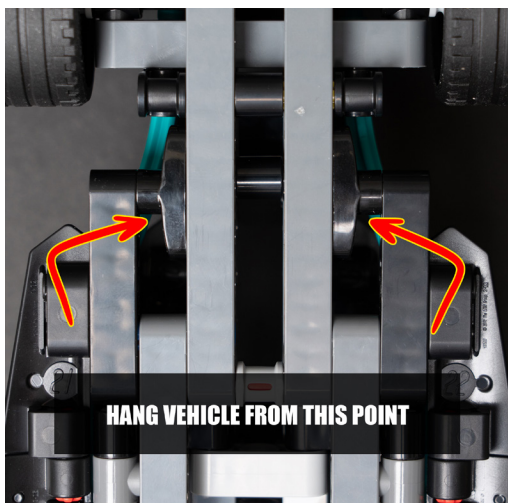

MERCEDES AMG F1 PULLBACK - 42165

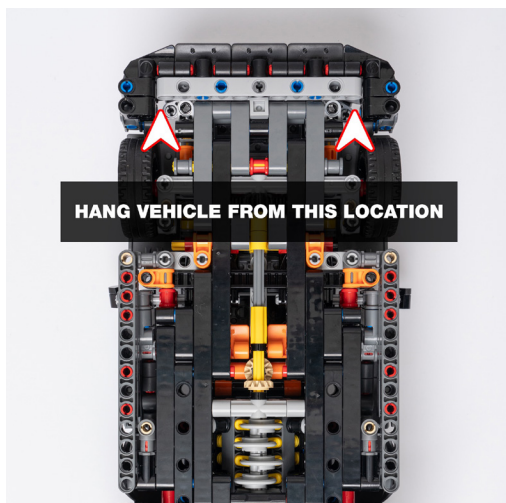

KOENIGGSEGG JESKO- 42173/42184

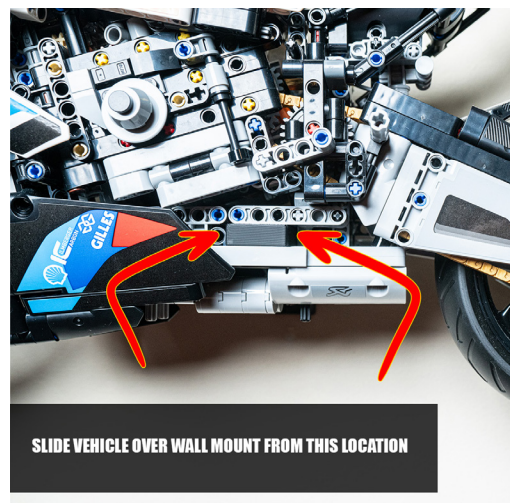

BMW 1000RR - 42130

LEGO TECHNIC

MOUNTING DIAGRAM FOR TBMNT42205V



HANG VEHICLE FROM THIS LOCATION

RED BULL RB20 F1 - 42206 VERTICAL



MOUNTING DIAGRAM FOR 42206H



HANG VEHICLE FROM THIS LOCATION IN EITHER L OR R ORIENTATION

RED BULL RB20 F1 - 42206 HORIZONTAL




MOUNTING DIAGRAM FOR 42206U



HANG VEHICLE FROM THIS LOCATION TO MOUNT VEHICLE UPSIDE DOWN

RED BULL RB20 F1 - 42206 UPSIDE DOWN

MOUNTING DIAGRAM FOR TBMNT42207V

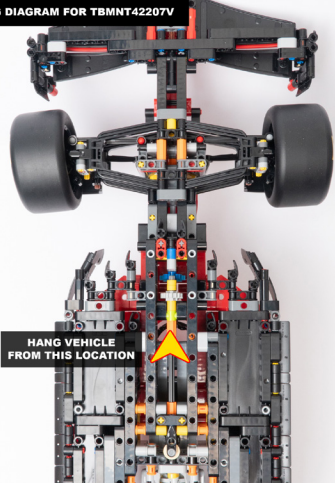

HANG VEHICLE FROM THIS LOCATION

FERRARI SF-24 F1 - 42207 VERTICAL




HANG VEHICLE FROM THIS LOCATION IN EITHER L OR R ORIENTATION

FERRARI SF-24 F1 - 42207 HORIZONTAL



MOUNTING DIAGRAM FOR 42207U

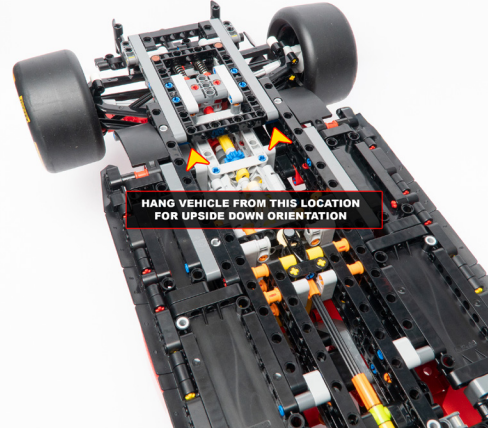

HANG VEHICLE FROM THIS LOCATION FOR UPSIDE DOWN ORIENTATION

FERRARI SF-24 F1 - 42207 UPSIDE DOWN



HANG VEHICLE FROM THIS LOCATION

F&F TOYOTA SUPRA MK4 - 42204



HANG VEHICLE FROM THIS LOCATION

CORVETTE STINGRAY - 42205




HANG VEHICLE FROM THIS LOCATION

DUCATI PANIGALE V4 R - 42107


LEGO TECHNIC



PORSCHE 99X FORMULA E - 42137

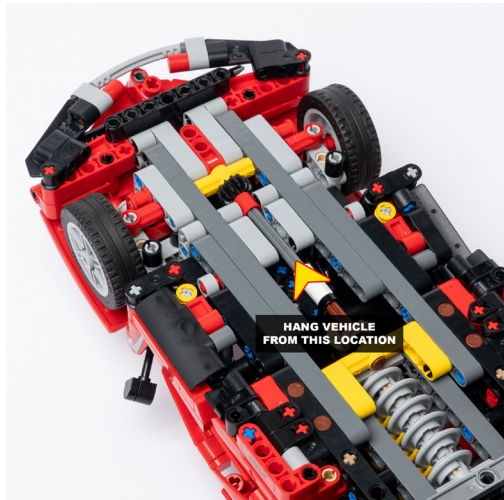


FERRARI FXX K - 42212

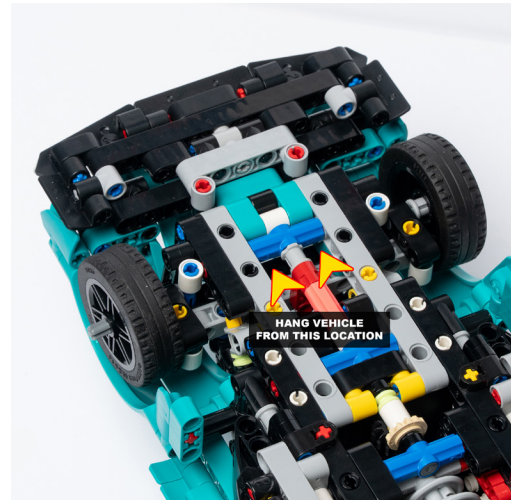

ASTON MARTIN VALKYRIE - 42208



NISSAN SKYLINE GT-R - 42210

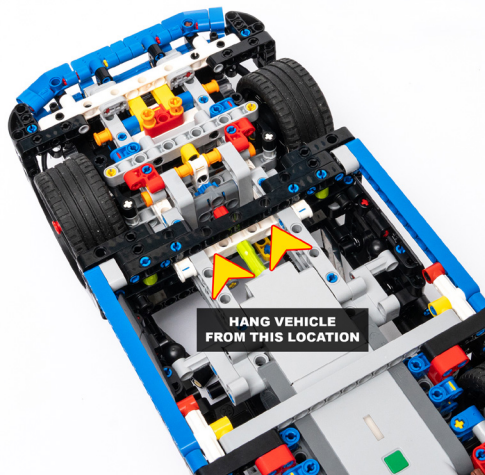


PORSCHE GT4 E-PERFORMANCE - 42176

MOUNTING DIAGRAM FOR TBMNT42223V



FORD GT40 MKII - 42223

INSTALL THE INCLUDED RED TECHNIC AXLES INTO THE SLOTS SHOWN BELOW TO HOLD THE ENGINE BAY COVER SHUT

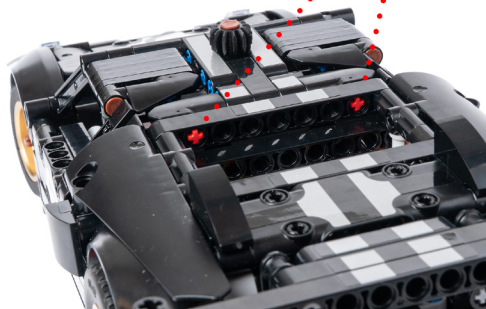


ENGINE COVER - FORD GT40 MKII - 42223

MOUNTING DIAGRAM FOR 42224V



VERTICAL REXY PORSCHE GT3 - 42224

MOUNTING DIAGRAM FOR 42224U

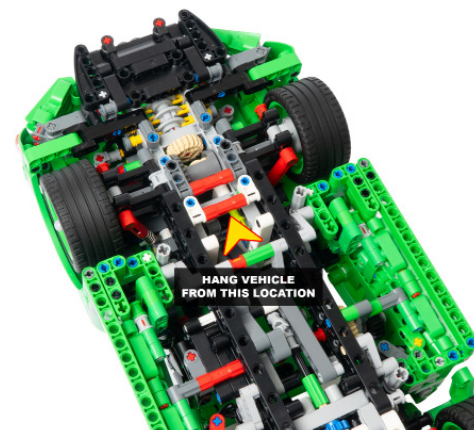


UPSIDE DOWN REXY PORSCHE GT3 - 42224

LEGO TECHNIC




VERTICAL MOUNTING DIAGRAM FOR TBMNT42039

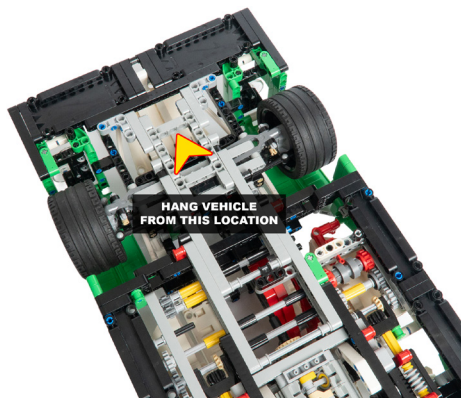

VERTICAL 24 HOUR RACE CAR - 42039



UPSIDE DOWN MOUNTING DIAGRAM FOR TBMNT42039

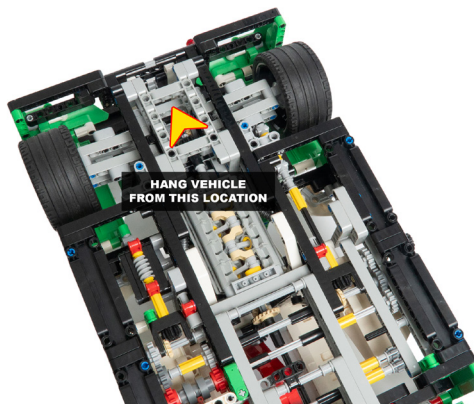


UPSIDE DOWN 24 HOUR RACE CAR - 42039

ENGINE COVER PIN INSTALL

STEP 1

Install the included black technic pin to the left wing of the engine cover as seen in the diagram on the right.

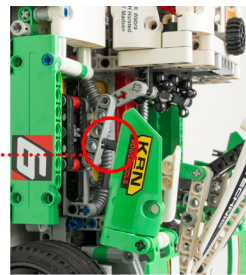


STEP 2

Install the included black technic pin to the right wing of the engine cover as seen in the diagram on the right. Close engine cover and snap the black technic pins to secure the engine cover from opening.



ENGINE COVER 24 HOUR RACE CAR - 42039

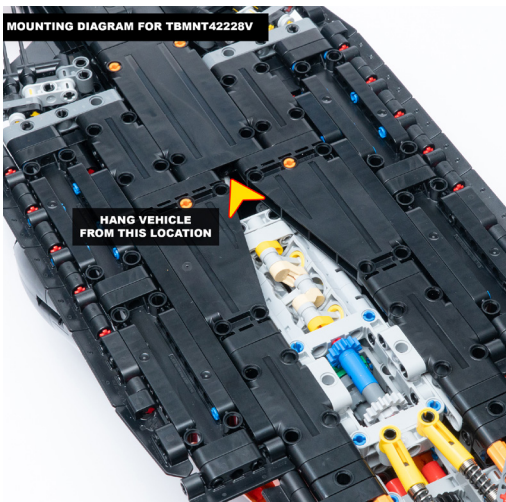

VERTICAL MCLAREN MCL-39-42228

MOUNTING DIAGRAM FOR TBMNT42228U



UPSIDE DOWN MCLAREN MCL-39-42228

STEP 1

Insert the included black technic pins into the engine bay cover as seen in the diagram on the right.



STEP 2

Observe the insert location on the vehicle where the technic pins will lock in place.



STEP 3

Hold the engine bay cover at an angle while pushing forward to snap the technic pins in place. Once in place slide the rear of the engine bay cover into its original spot.



ENGINE COVER MCLAREN MCL-39-42228



MCLAREN MCL39-F1 CAR HORIZONTAL WALL MOUNT INSTALL GUIDE-TBMNT42228H

STEP 1


Install the included bracket to the underside of the car into the holes located in the diagram on the right. The open end in the middle of the bracket should be pointed to the front of the car.

This bracket will ensure the vehicle will not tilt due to the angled technic plates on the bottom of the car.




STEP 2

Install the mount on the wall ensuring it is level. Hang the vehicle on the mount in either a left or right orientation in the slot located in the diagram on the right.

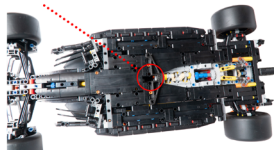


HORIZONTAL MCLAREN MCL-39-42228

MOUNTING DIAGRAM FOR TBMNT42222V

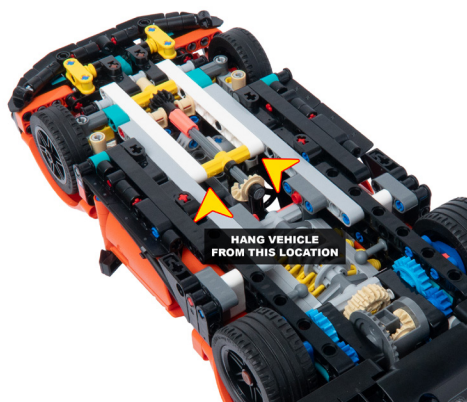

BUGATTI CHIRON PUR SPORT - 42222

MOUNTING DIAGRAM FOR TBMNT42226V

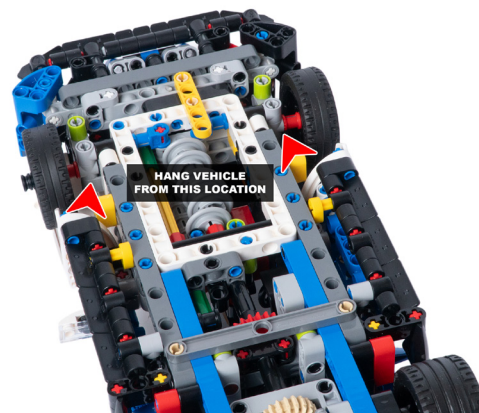

BMW GT3 EVO - 42226


LEGO TECHNIC

MOUNTING DIAGRAM FOR TBMNT-4223V




VERTICAL MOUNT FORD GT40 - 42223V

MOUNTING DIAGRAM FOR TBMNT-42229

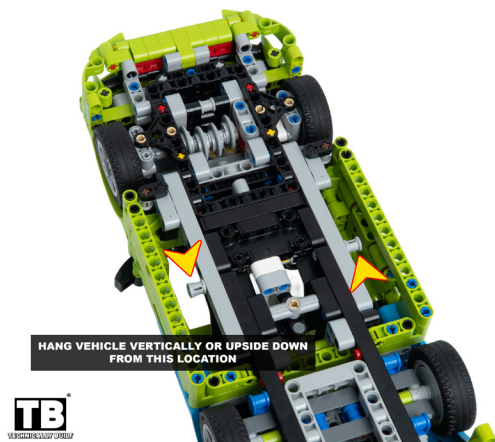


F&F MITSUBISHI ECLIPSE - 42229

MOUNTING DIAGRAM FOR TBMNT-42231V

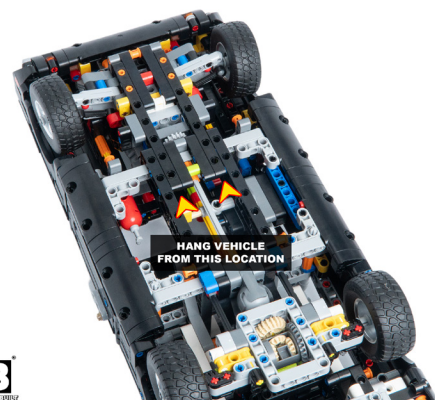


F&F VERTICAL DODGE CHARGER R/T - 42231

MOUNTING DIAGRAM FOR TBMNT-42231U

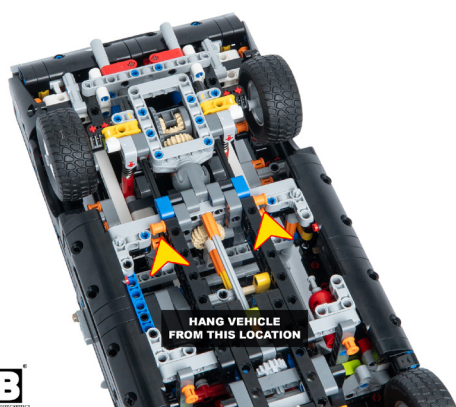

F&F UPSIDE DOWN DODGE CHARGER R/T - 42231

MOUNTING DIAGRAM FOR TBMNT-42243V

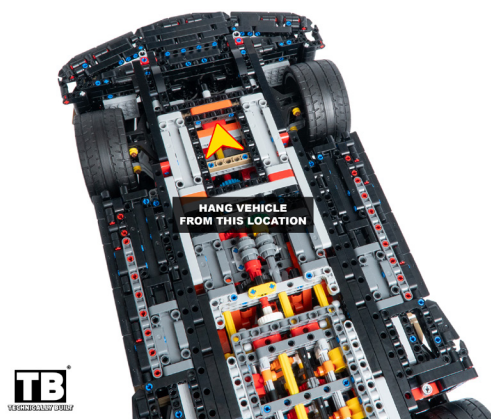

KOENIGSEGG SADAIRS SPEAR-42243V


STEP 1

Insert the included black technic pins into the engine bay cover as seen in the diagram on the right.



STEP 2

Observe the insert location on the vehicle where the technic pins will lock in place.

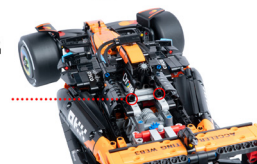


STEP 3

Hold the engine bay cover at an angle while pushing forward to snap the technic pins in place. Once in place slide the rear of the engine bay cover into its original spot.



MOUNTING DIAGRAM FOR TBMNT-42240V

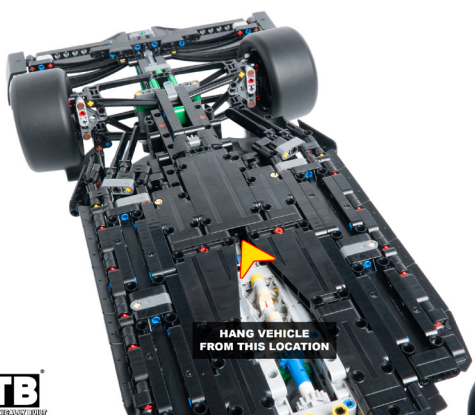


VERTICAL ASTON MARTIN F1-42240V

STEP 1

Install the included bracket to the underside of the car into the holes located in the diagram on the right.


The open end in the middle of the bracket should be pointed to the front of the car.

This bracket will ensure the vehicle will not tilt due to the angled technic plates on the bottom of the car.

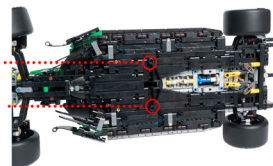


STEP 2

Install the mount on the wall ensuring it is level. Hang the vehicle on the mount in either a left or right orientation in the slot located in the diagram on the right.

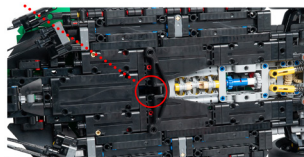

MOUNTING DIAGRAM FOR TBMNT-42240U

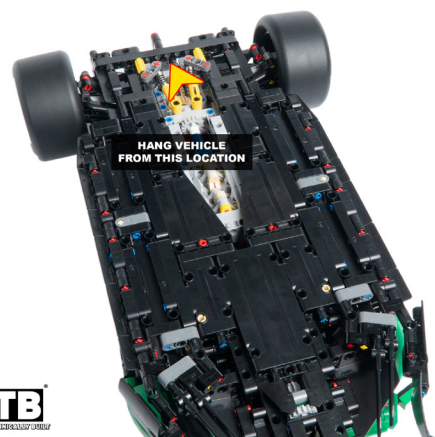


UPSIDE DOWN ASTON MARTIN F1-42240U



TECHNICALLY BUILT

**VEHICLE MOUNTING GUIDE FOR
LEGO® ICONS**


LEGO ICONS

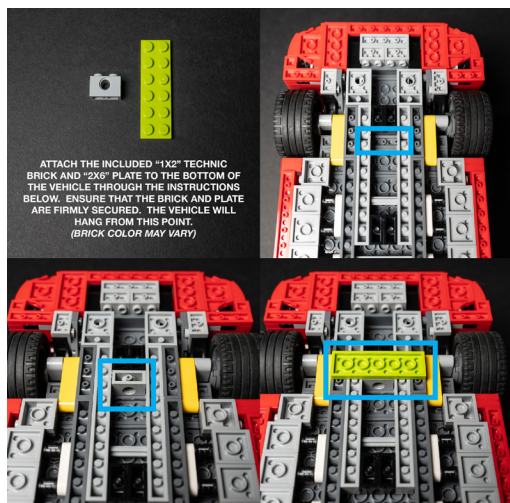


FERRARI F40 - 10248



CLASSIC CORVETTE - 10321

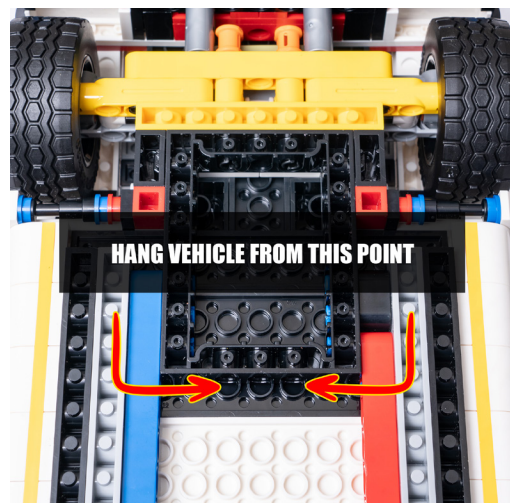


PORSCHE 911 - 10295

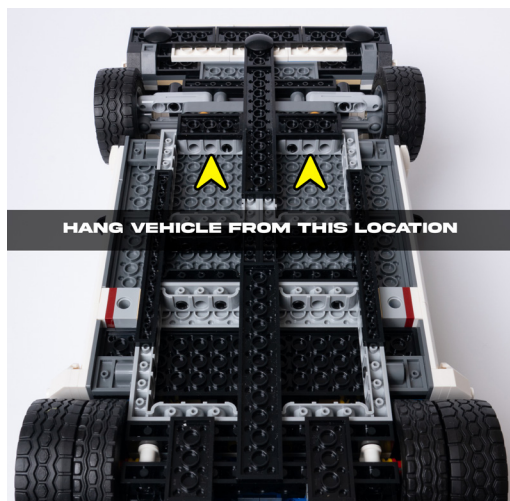


LAMBORGHINI COUNTACH- 10337



CONCORD- 10318

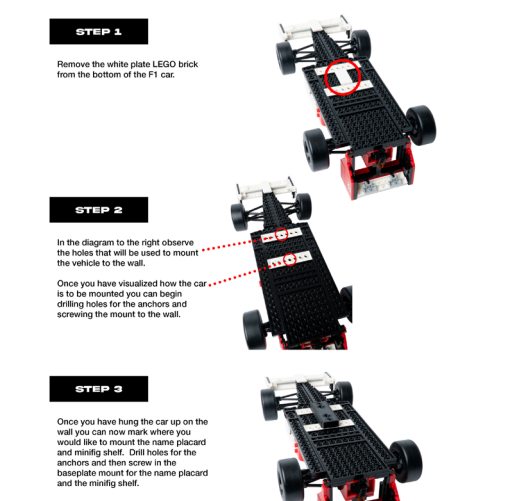


MCLAREN MP4/4 - 10330

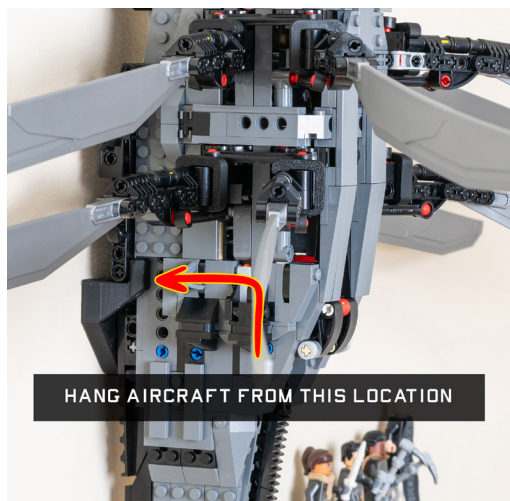

DUNE ROYAL ORNITHOPTER -10327




DUNE ROYAL ORNITHOPTER -10327

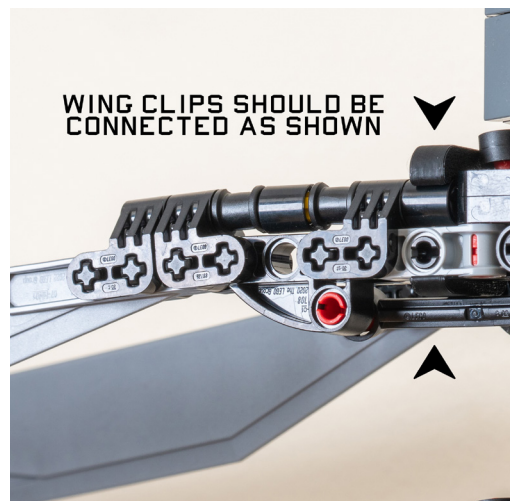


DUNE ROYAL ORNITHOPTER -10327

LEGO ICONS

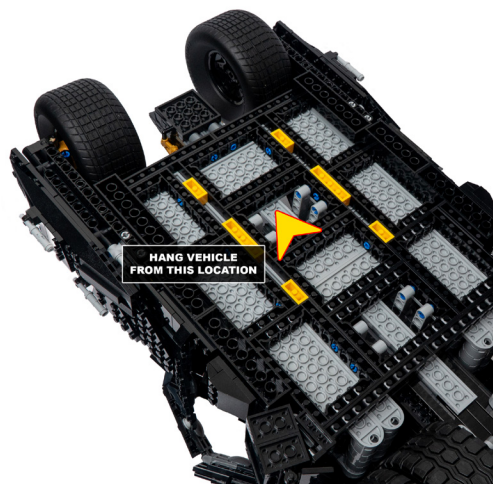


BATMOBILE TUMBLER - 76023

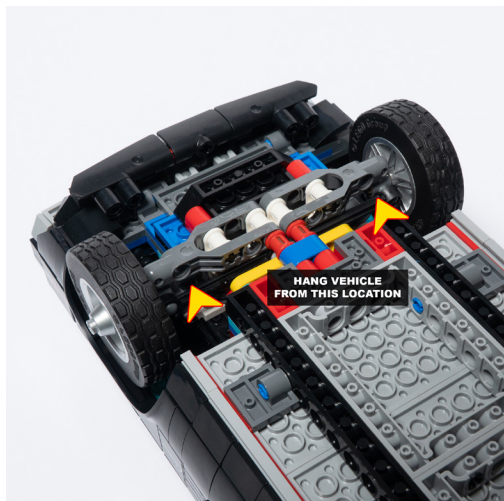

CHEVROLET CAMARO Z28 - 10304

MOUNTING DIAGRAM FOR TBMNT10357V

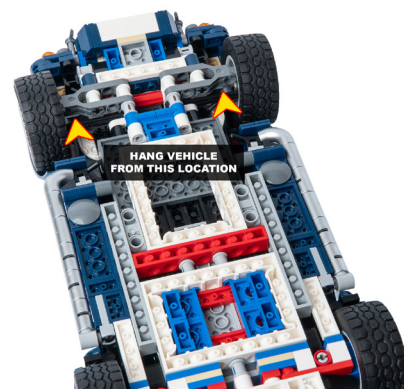


SHELBY COBRA 427 S/C - 10357

STEP 1

In the diagram to the right observe the holes that will be used to mount the vehicle to the wall.

Once you have visualized how the car is to be mounted you can begin drilling holes for the anchors and screwing the mount to the wall.

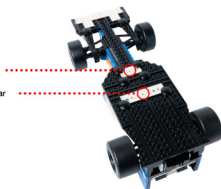

STEP 2

Once you have hung the car up on the wall you can now mark where you would like to mount the name placard and minifig shelf. Drill holes for the anchors and then screw in the baseplate mount for the name placard and the minifig shelf.



STEP 1

Remove the brown round LEGO brick from the bottom of the F1 car.



STEP 2

In the diagram to the right observe the holes that will be used to mount the vehicle to the wall.

Once you have visualized how the car is to be mounted you can begin drilling holes for the anchors and screwing the mount to the wall.





STEP 3

Once you have hung the car up on the wall you can now mark where you would like to mount the name placard and minifig shelf. Drill holes for the anchors and then screw in the baseplate mount for the name placard and the minifig shelf.



MOUNTING DIAGRAM FOR TBMNT11378V

INSTALL THE MOUNT WITH THE ANGLE FACING UPWARDS AS INDICATED BY THE ARROWS ON THE MOUNT

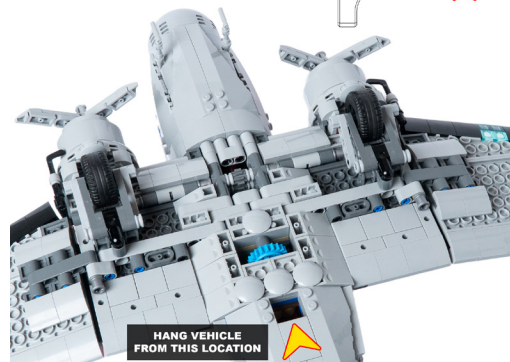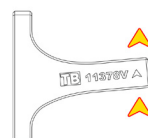

WILLIAMS F1 (NIGEL MANSELL)-11375

FERRARI MICHAEL SCHUMACHER -11375

DOUGLAS DC-3 PANAM -11378

MOUNTING DIAGRAM FOR TBMNT-11380

HANG BICYCLE FROM THIS LOCATION




ROAD BIKE - 11380




TECHNICALLY BUILT

**VEHICLE MOUNTING GUIDE FOR
LEGO® CREATOR**


LEGO CREATOR

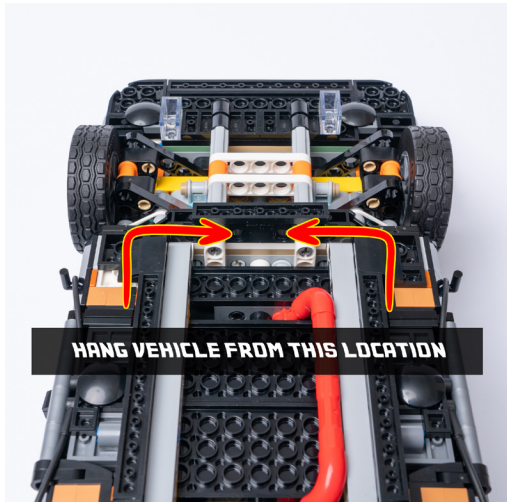

DELOREAN TIME MACHINE - 10300

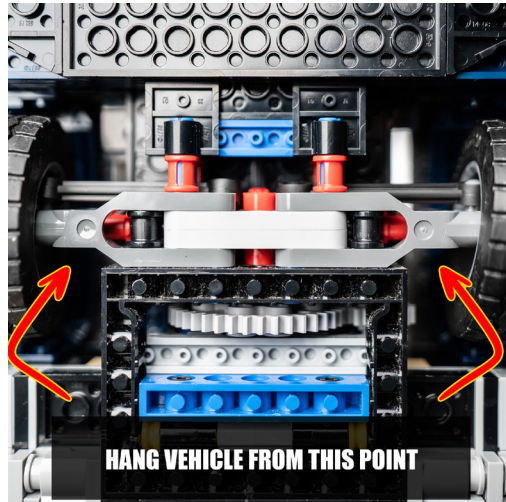

FORD MUSTANG - 10265

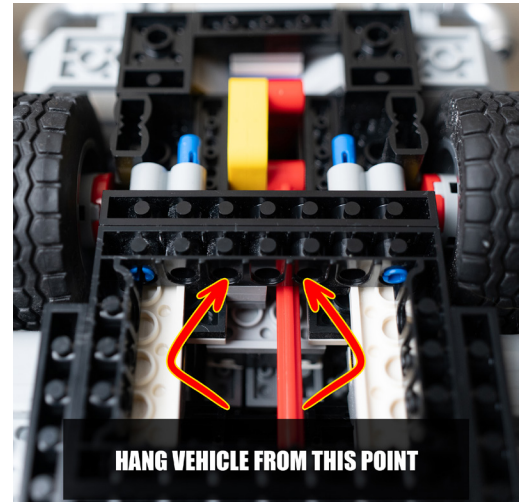

ASTON MARTIN DB5 007 - 10262




TECHNICALLY BUILT

**MOUNTING GUIDE FOR
LEGO® MARVEL**

LEGO MARVEL


STEP 1

Install the included 2x2 brick counterstop to the round brick on the truss that is perpendicular to the yellow or black technic rods (you can hang the shield via the black or yellow technic axles.)

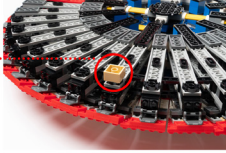

STEP 2

Observe how the mount will slide underneath the circle baseplate and the technic axles before hanging on the wall.

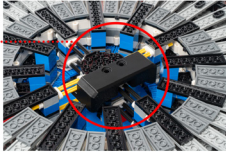

STEP 3

Carefully flip the shield over and adjust any loose flaps that have flown open. Align the shield so that the truss with the tan 2x2 brick is centered and at the bottom of the shield. Hold onto both sides of the shield and slide it into place on the mount. Ensure it is completely set into the mount before releasing grip of the set. Hang the name placard with the included baseplate mount.



CAPTAIN AMERICA'S SHIELD - 76262



THOR'S HAMMER - 76209




TECHNICALLY BUILT

**VEHICLE MOUNTING GUIDE FOR
LEGO® BATMAN**


LEGO BATMAN



CLASSIC TV SERIES BATMOBILE - 76328

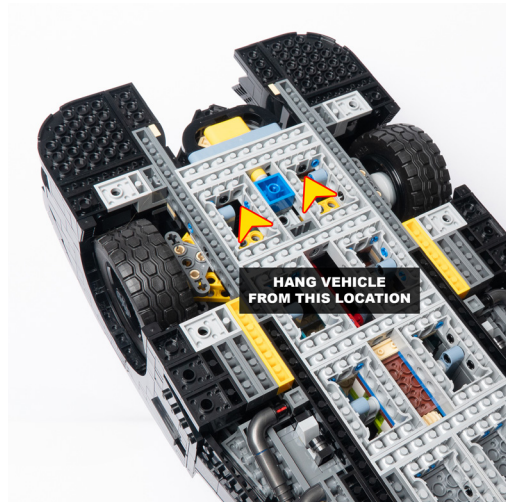

1989 BATMOBILE - 76139

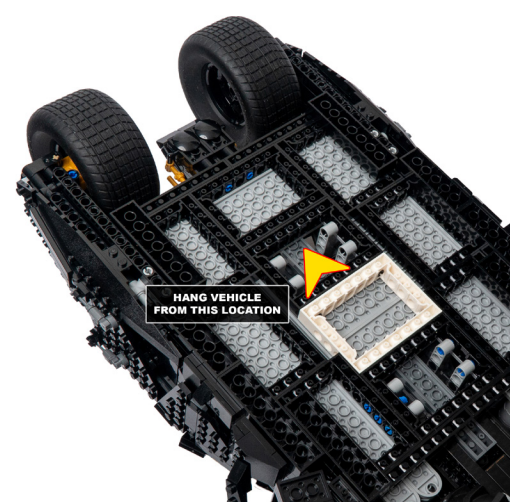


BATMOBILE TUMBLER - 76240



1989 BATMOBILE - 76139


VERTICAL

Install the mount with the technic pins facing upward. Hang vehicle from the two holes shown on the right.

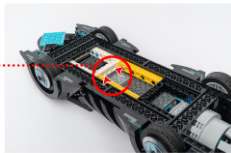


INVERTED

Install the mount with the technic pins facing upward. Hang vehicle from the two holes shown on the right.

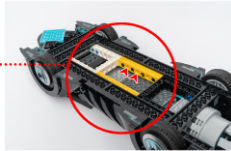

HORIZONTAL

Install the mount with the technic pins facing upward. Hang vehicle from the two holes shown on the right.

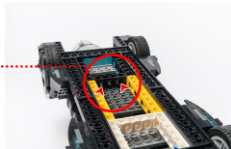

BATMAN FOREVER BATMOBILE - 76304




TECHNICALLY BUILT

**VEHICLE MOUNTING GUIDE FOR
LEGO® STAR WARS**

LEGO STAR WARS

MOUNTING DIAGRAM FOR TBMNT75442

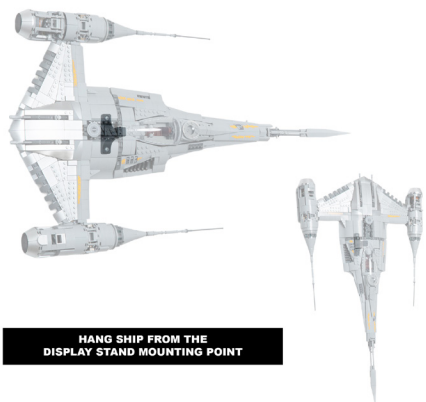

MANDO N1 STARFIGHTER - 75442

MOUNTING DIAGRAM FOR TBMNT-75409V



JANGO FETT STARFIGHTER - 75409V

MOUNTING DIAGRAM FOR TBMNT-75060



BOBA FETT STARFIGHTER - 75409V



TECHNICALLY BUILT

**VEHICLE MOUNTING GUIDE FOR
CADA**

CADA




ALFA ROMEO F1 - C64005W



KICK SAUBER F1 - C55032W

MOUNTING DIAGRAM FOR TBMNT-C64012W-V

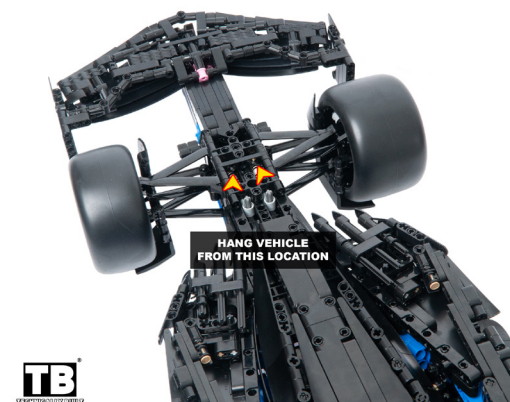

ALPINE F1 - C64012W