

TOOLS REQUIRED FOR ASSEMBLY



LEVEL



PHILLIPS
SCREWDRIVER



DRILL




DRILL
BITS

INCLUDED ITEMS

TBMNT21363

LEFT WALL
BRACKET (X1)

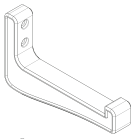

RIGHT WALL
BRACKET (X1)



LONG SCREWS (X4)




ANCHORS (X5)




TBMNT21363-GWP


LEFT WALL
BRACKET (X1)

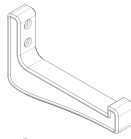

RIGHT WALL
BRACKET (X1)

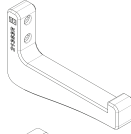

GWP WALL
BRACKET (X1)

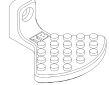

LONG SCREWS (X4)



SHORT SCREWS (X1)



ANCHORS (X6)



Holding each bracket up to the wall drive the top screws in with a drill and Phillips bit, but do not fully tighten. Hold the mount flush to the wall, place a level on top, and mark the lower hole locations.

Swing the mounts out of the way. Drill pilot holes for the bottom screws, insert anchors, and tap them flush.

Install the bottom screws. Avoid over-tightening with a drill, finish tightening by hand until snug.

Hang the ship on the brackets as shown in the photos, ensuring it rests fully against the front of the mount.



WARNING

DO NOT USE DRILL TO DO FINAL TIGHTENING.
DAMAGE TO THE MOUNTS CAN OCCUR.

USE A PHILLIPS SCREWDRIVER TO TIGHTEN
DOWN THE MOUNTS.

STEP 1

Locate a wall and choose the desired height for your Goonies ship. Use painter's tape to secure the included mounting guide in place. Ensure it is level before marking your holes.

Use a drill bit or one of the included screws to puncture the top hole targets on the guide. Remove the guide.

Drill pilot holes for the top screws using a 1/4" drill bit. Insert the anchors and tap them flush with a rubber mallet.

STEP 2

(TBMNT21363-GWP) ONLY

Choose a spot near the ship to install the GWP mount. Drill a pilot hole using the same techniques from above. Install the GWP on the mount making sure it is fully pressed down on the studs for maximum strength.